



P-BUA-PROMASTER CITY

**Wiring Harness for Backup Alarm
2015-2020 Ram Promaster City**

INSTALLATION MANUAL



Thank you for purchasing the
P-BUA-PROMASTER CITY

Table of Contents

Page 3 - Tools Required For Installation

WHAT'S INCLUDED:

- Vehicle Specific Wire Harness (P-BUA-PROMASTER CITY)

COMPATIBLE ACCESSORIES:

- 97dB Backup Alarm (BUA-97C)
- 97dB White Noise Backup Alarm (BUA-97WNC)

TOOLS REQUIRED:



1. 10mm Nut-setter
2. #3 Phillips Bit
3. Impact Drill


STEP 1:

Use an impact drill and #3 Phillips bit to remove the driver side tail lamp assembly



STEP 2:


Unplug the OEM tail lamp connector and install the P-BUA-PROMASTER CITY harness between the OEM connectors

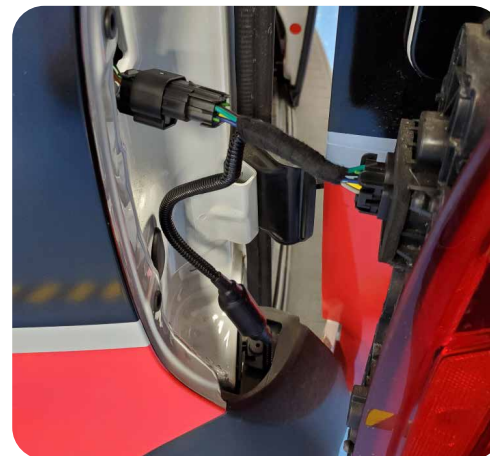

STEP 3:

Route the harness down the tail lamp cavity and re-install the driver side tail lamp

Note: Make sure the in-line filter on the harness is tucked into the lamp housing as shown or the lamp will not fit back into place

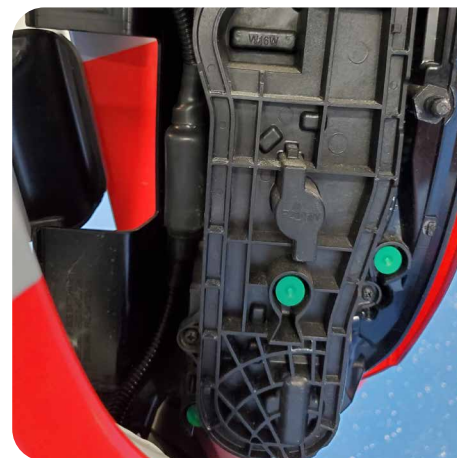

.....

STEP 4:

Use an impact drill and 10mm nut-setter to install a compatible backup alarm on the underside of the vehicle

Note: (2) 10mm TEK screws are provided with the compatible backup alarm



STEP 5:

Plug the backup alarm connector into the mating connector on the P-BUA-PROMASTER CITY harness.

STEP 6:

Test the backup alarm

.....



Phone: 866.931.8021 (Option 3)
Email: support@aampglobal.com

EchoMaster is a Power Brand of AAMP Global

EchoMaster.com