



P-BUA-SILVERADO

**Wiring Harness for Backup Alarm
2016-2021 Chevrolet Silverado**

INSTALLATION MANUAL



Thank you for purchasing the
P-BUA-SILVERADO

Table of Contents

Page 3 - Tools Required For Installation

WHAT'S INCLUDED:

- Vehicle Specific Wire Harness (P-BUA-SILVERADO)

COMPATIBLE ACCESSORIES:

- 97dB Backup Alarm (BUA-97C)
 - 97dB White Noise Backup Alarm (BUA-97WNC)
-

TOOLS REQUIRED:



1. 10mm Nut-setter
 2. Impact Drill
-

STEP 1:


Locate the OEM tail lamp connector that is below the truck

- The connector is to the left of the vehicle's spare tire on the cross member



STEP 2:

Unplug the OEM connector

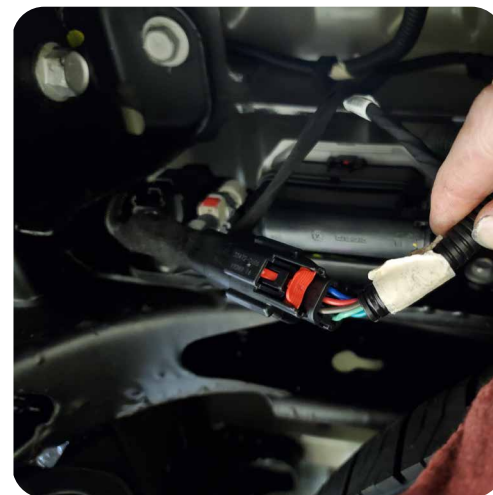


STEP 3:

Install the P-BUA-SILVERADO harness between the two OEM connectors

.....

STEP 4:

Use an impact drill and 10mm nut-setter to install a compatible backup alarm on the metal surface that is below the truck's tail lamp cavity (just outside and above the driver side frame rail).
Note: (2) 10mm TEK screws are provided with the compatible backup alarm

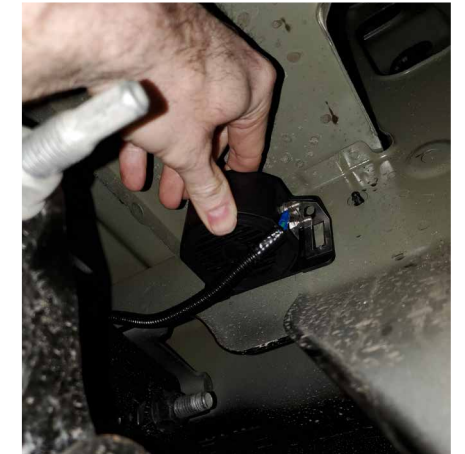

STEP 5:

Plug the backup alarm connector into the mating connector on the P-BUA-SILVERADO harness

STEP 6:

Enter the Vehicle Settings menu through the driver's information center

- Change the remote entry exterior lighting to "off"
 - This will prevent the backup alarm from sounding when the vehicle is unlocked with the OEM keyless entry transmitter

STEP 7:

Test the backup alarm

.....



Phone: 866.931.8021 (Option 3)
Email: support@aampglobal.com

EchoMaster is a Power Brand of AAMP Global

EchoMaster.com