



P-BUA-SUPER DUTY

**Wiring Harness for Backup Alarm  
2017-2021 Ford Super Duty Pickup**

**INSTALLATION MANUAL**



Thank you for purchasing the  
**P-BUA-SUPER DUTY**

---

**Table of Contents**

**Page 3** - Tools Required For Installation

---

**WHAT'S INCLUDED:**

- Vehicle Specific Wire Harness (P-BUA-SUPER DUTY)

---

**COMPATIBLE ACCESSORIES:**

- 97dB Backup Alarm (BUA-97C)
  - 97dB White Noise Backup Alarm (BUA-97WNC)
- .....

---


**TOOLS REQUIRED:**



1. 10mm Nut-setter
  2. Impact Drill
  3. Diagonal Cutters
- .....

**STEP 1:**

Locate the OEM inline connector that is on the inside of the passenger side frame rail

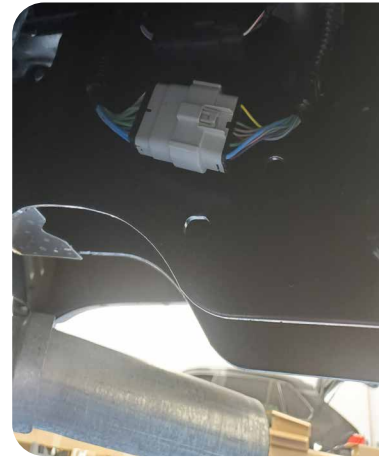

**STEP 2:**

Unplug the OEM connector and install the P-BUA-SUPER DUTY harness between the OEM connectors



**STEP 3:**

Route the harness over the top side of the frame rail, toward the curb side of the truck



**STEP 4:**

Use an impact drill and 10mm nut-setter to install a compatible backup alarm on the underside of the vehicle

Note: (2) 10mm TEK screws are provided with the compatible backup alarm



**STEP 5:**

Plug the backup alarm connector into the mating connector on the P-BUA-SUPER DUTY harness. Secure any excess wiring with cable ties. Use diagonal cutters to remove excess cable tie material.

**STEP 6:**

Test the backup alarm





Phone: 866.931.8021 (Option 3)  
Email: [support@aampglobal.com](mailto:support@aampglobal.com)

EchoMaster is a Power Brand of AAMP Global

[EchoMaster.com](http://EchoMaster.com)